 


Belt

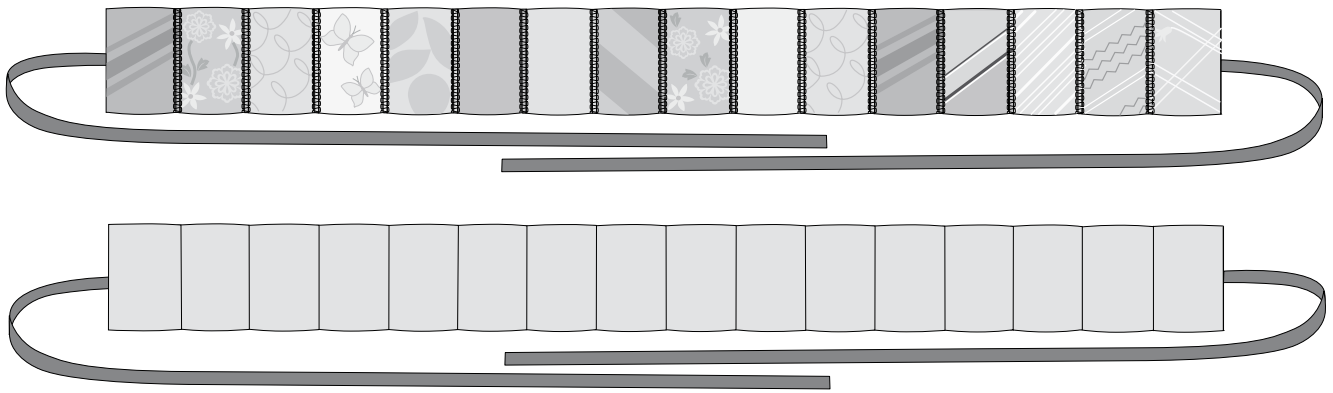

Huskylock™



Sewing supplies

- 5-10 old neckties with different colors and pattern
- 6" x 55" (15 x 140 cm) silk fabric for the backing
- 6" x 55" (15 x 140 cm) fusible batting
- 5 yard (4,5 m) grey ribbon or 1/4 yard (23cm) grey silk fabric for making your own ribbon
- 4 spools grey overlock thread
- Sewing thread matching the backing fabric
- Seam ripper
- Pins
- Cutting Mat

HUSQVARNA VIKING® Accessories

- HUSKYLOCK™ s21 /s25
- HUSQVARNA VIKING® sewing machine
- OLFA® Ergonomic Rotary Cutter ..#415 16 42-01
- Ruler #412 66 17-01
- Clear 1/4" Piecing Foot #412 92 74-47

You can find these and many other accessories in the HUSQVARNA VIKING® Accessory User's Guide or on our website www.husqvarnaviking.com for purchase at your nearest HUSQVARNA VIKING® Dealer.

Note: 1/4" (6 mm) seam allowance is included in all measurements.

Cut

Carefully open the back seams of the ties using the seam ripper. Press the ties flat.

Measure your waist. Divide the waist measurement by 6 (the finished width of the pieces). This is the number of pieces you will need. From the ties, cut pieces 3" x 6" (7 x 15 cm). The number of pieces of each tie depends on how many different ties you are using.

Arrange the pieces in an order you like. View illustration to the right.

Sew



Thread your HUSKYLOCK™ with grey overlock thread and set it for 4-thread overlock. Start to sew the two first cut tie pieces, wrong sides together. Continue with all the other pieces. Press all the seam allowances in the same direction.

Make sure the length of piece matches the width of your waist. If not, add more pieces or take away pieces until it fits you comfortably. Cut the width of the belt down to 4" (10 cm) or to the width you want. Press fusible batting to the wrong side. Cut the backing fabric the same size.

Make ribbons:

From grey silk fabric, cut two 1" (2,5 cm pieces) x the width of fabric. Set the Huskylock™ for three thread narrow edge. Before you start to sew, test sew on a scrap of fabric and adjust if necessary. Overlock both sides of the pieces. When overlocking the second side, let the left edge of fabric follow the left edge of presser foot. That will make a 5/8" (1cm) wide ribbon.


5/8" (1cm)

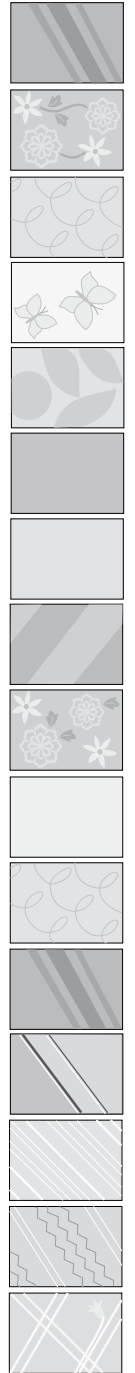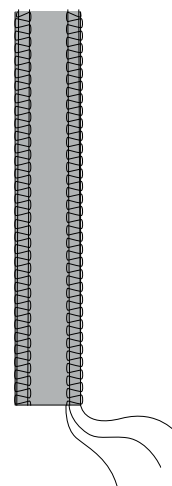

Pin the ribbons at the right side of the short ends of front piece. Set your HUSQVARNA VIKING® sewing machine for sewing. Snap on the Clear 1/4" Piecing Foot, select Woven Medium and Seam on the Exclusive SEWING ADVISOR® feature and sew the ribbons in place.

Place the backing piece on the right side of front piece and pin in place. Sew around all sides, and leave a 6" (15 cm) opening, on one of the long sides. Press the seam allowances. Turn to right side through the opening. Press. Close the opening by hand stitching.

To keep the layers together and to get a fashionable, quilted look, sew along each overlock seam through all layers.

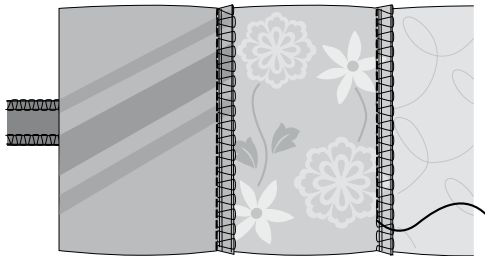

Finished!