


# Vest

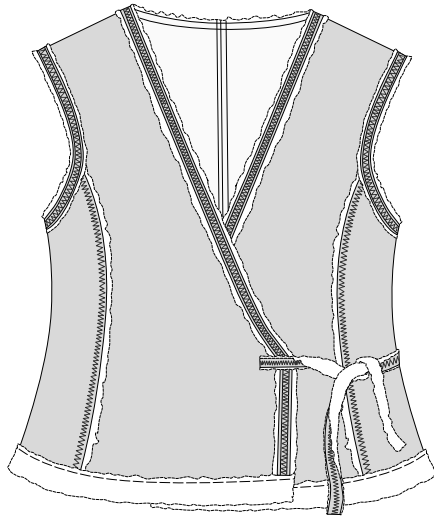

*Huskylock™*



(Advanced level)

## Sewing Supplies

- Kwik Sew Pattern 3185 view A
- Faux fur, for amount see sewing pattern
- Sewing thread to match the fabric
- 3 cones of overlock thread slightly brighter than the fabric
- Pins


## HUSQVARNA VIKING® Accessories

- HUSQVARNA VIKING® HUSKYLOCK™ Overlock Machine
- HUSQVARNA VIKING® Sewing Machine
- Non-stick Glide Foot H # 412 79 61-45
- Pictogram Pen #412 08 38 -48

You can find these and many other accessories in the HUSQVARNA VIKING® Accessory User's Guide or on our website [www.husqvarnaviking.com](http://www.husqvarnaviking.com), for purchase at your nearest Husqvarna Viking Dealer.

Pattern changes for front piece:

Fold the pattern piece or draw a line to make the front seam line and vest lower edge straight.

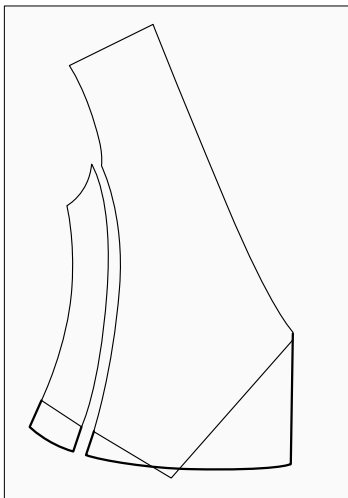

Cut away the seam allowance around the armhole, neckline and front seam line.

Cut out the Jacket pattern, in the correct size.

## Cut

Seam allowance: 5/8" (1,5 cm) are included in the pattern. Add 6 cm for lower edge of Vest.

Cut out all vest pieces from the faux fur fabric except the interfacings.

## Strips:

- 1- 5/8" x 72" (1,5 x 180cm) for neckline and front line
- 2- 5/8" x 27" (1,5 x 69 cm) for armhole
- 2- 5/8" x 12" (1,5 x 30 cm) for tie belt


## Sewing

Set your Huskylock machine for a wide coverstitch. Thread with gray overlock thread.

Sew a coverstitch seam in the center of each strip.

Note: Sew the cover stitch seams with the fur side up so the under side of the fabric shows the cover stitch as a decoration seam on the right side of the garment.

Overlap the seam allowance 1 1/4" (3cm) on the front side seams. Pin in place. With the fur side up, sew a cover stitch seam in the center of the overlap.

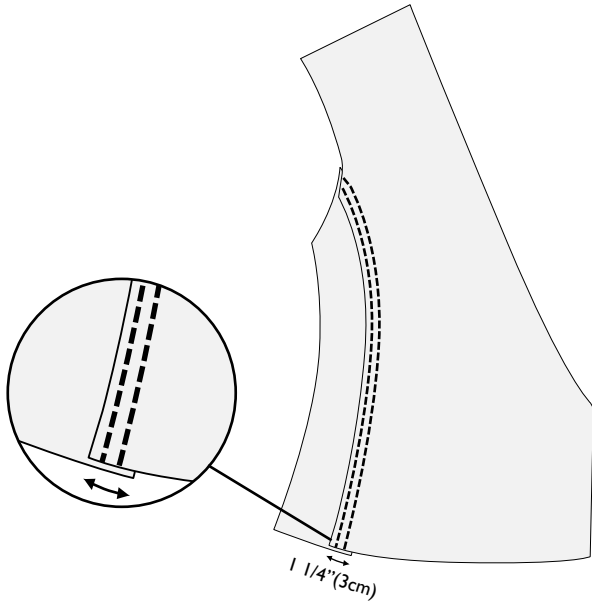


Pin the 5/8" x 72" (1,5 x 180cm) faux fur strip on the edge of the neckline and front seam line.

Set the sewing machine for sewing. Thread your machine with sewing thread on the top and bobbin. Snap on the non-stick glide foot H. Using a straight stitch, sew the strip in place with a straight stitch on both sides of the coverstitch see illustration.

Continue in the same way on the back side seams, side seams and shoulder seams. Trim the seam allowance to 1/4" (6mm) on each side of the coverstitch seam.

At the lower edge of the vest, fold a double hem to the right side of the vest as illustrated. Pin and sew the hem in place with a straight stitch on a sewing machine.

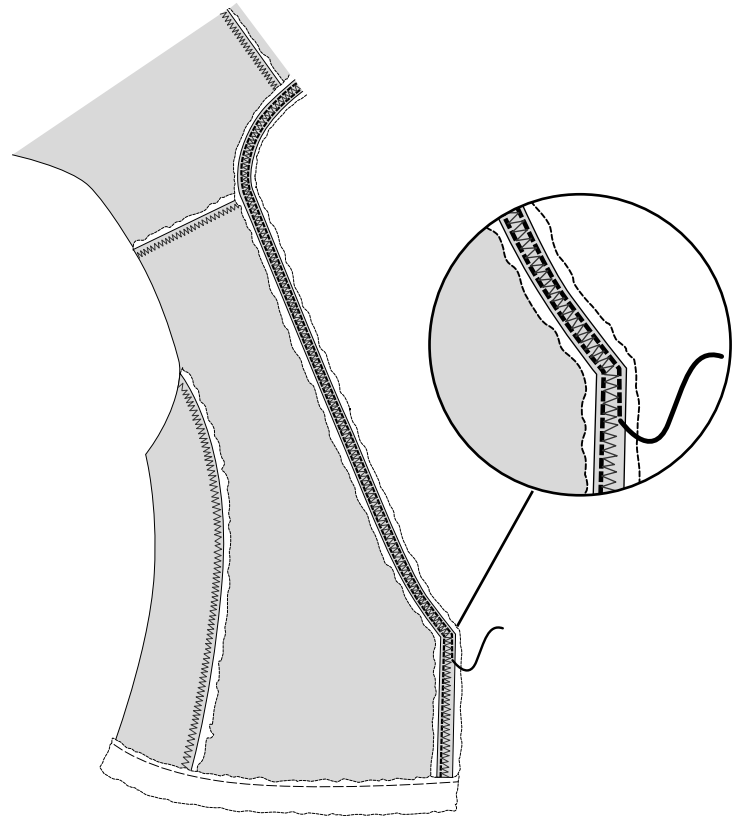

Continue in the same way with the 5/8" x 27" (1,5 x 69 cm) strips around the armholes.

Pin one strip 5/8" x 12" (1,5 x 30 cm) on the right front seam line and one strip on the left side seam 7 1/2" (19cm) from the hem.

Stitch the strips in place.

## Finished

